

tube. Install 3' tube shields on the back side of the Platen Pendants at sootblowers 25 & 26.

- Intermediate Secondary Superheat at the 4th level of scaffold down from the top at sootblowers 37 & 38, repair or replace split ring castings as needed at this level as well as replace or repair sootblower shields as needed. On the back side of the Intermediates at sootblower 45 - 48, replace or repair sootblower tube shields as needed. The Steam Cooled spacer tubes on the back side of the Intermediates are wasted between the attachment brackets. Remove the attachment brackets, inspect for damage, pad weld the damaged tubes, then replace the brackets on the spacer tube.
- Platen Secondary Superheat Pendants on the 5th level of scaffold down from the top at sootblowers 29 & 30, repairs are needed on the panel alignment tubes on the pendants. The attachment brackets between the tubes on the panels have broken welds, replace or repair as needed.
- Intermediate Secondary Superheat at the 5th level of scaffold down from the top, sootblower 39 & 40, replace and repair tube shields as needed. Replace & repair split ring castings as needed. Remove any stainless steel flat bars remaining on the tubes being used in place of split ring castings. The split ring castings at the center of the Boiler have been eroded, pad weld any that are showing severe damage. Replace and repair tube shields on the back side of the Intermediates at sootblower 47 & 48. The tubes in this area appear to be running hot.
- Secondary Superheat Outlet tubes on the 5th level of scaffold down from the top (bottom scaffold) at sootblowers 47-50, repair or replace split ring castings as needed.

Contact Craig Stumph at 864-6548 for further information or to walk the job down.